

1. **Put 2 files to USB device.** (0107_WLDR_WAPPL_WMES.usb/ UPG-GMI-7108-MODELF-MFA5-HW11-SW10-CI01-AI01.usb)

File structure in USB device as below,

UPDATE \ 0107_WLDR_WAPPL_WMES.usb

UPDATE \ UPG-GMI-7108-MODELF-MFA5-HW11-SW10-CI01-AI01.usb

2. **Plug USB device into Server device.**

3. **Go to Server WEB page**

1) Update LDR0.6 -> LDR1.0 & SW: 0105-> 0107 (select any one from a or b)

a. SW Upgrade > USB > select '**0107_WLDR_WAPPL_WMES.usb**'

b. update LDR0.6 -> LDR1.0 & SW: 0105-> 0107 via WEBUI update

SW Upgrade > WEBUI > select '**0107_WLDR_WAPPL_WMES.nig**'

2)Update UPG0.8 -> UPG1.0

SW Upgrade > USB > select '**UPG-GMI-7108-MODELF-MFA5-HW11-SW10-CI01-AI01.usb**'

The latest S/W version info as shown: (Admin > SW version)

The screenshot displays the SAT>IP server web interface. At the top, the header shows 'SAT>IP server' and the date/time 'Wed 7 Jan 2015 16:55:00'. Below the header is a table with system status information:

SW Version	Abgelaufene Zeit	LNB Type	Clients	Tuner1	Tuner2
0107	02:34:59	Universal	1	Tuner3	Tuner4

Below the table is a navigation bar with links: 'System Einstellungen', 'System Status', 'Tuner', 'S/W Steigung', and 'Admin'. The main content area is titled 'Software Version' and contains a table with the following information:

Seriennummer	00A5010101020C07DE00000000D5
Loader Version	1.0
H/W Version	1.1
S/W Version	0107
Upgrader Version	1.0
Geräte-ID	2
UUID	d3d6a7c4-79c8-11e4-00a6-b8871e00
MAC Adresse	B8:87:1E:00:AF:ED
Bauen Sie Datum & Zeit	Jan 1 2015, 17:32:21